



Samsung Gear 360 Case Replacement

Prerequisite only

Written By: Steven Sadhwani





TOOLS:


- [iFixit Opening Tools](#) (1)
 - [Philips Head Screwdriver: Sized PH000](#) (1)
 - [Phillips #00 Screwdriver](#) (1)
 - [1.0 mm Flathead Screwdriver](#) (1)
-

Step 1 — Case



- Twist silver ring on the lens counter-clockwise with force to remove it.

Step 2

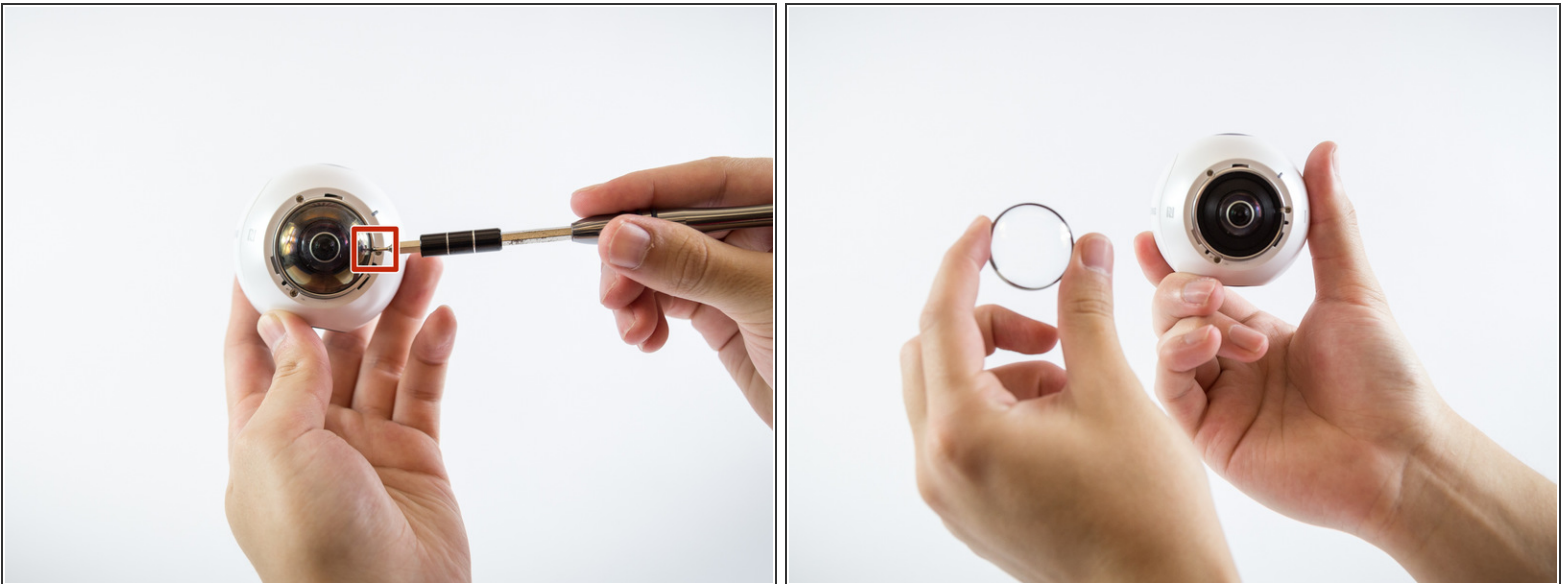


- Insert a small flathead screwdriver into marked slot on camera lens and pry off camera lens cover.

Step 3



- Using a PH00 screwdriver head, remove all Phillips #00 0.75 mm screws on the front of the camera.
- Repeat for the back side of the camera.

Step 4

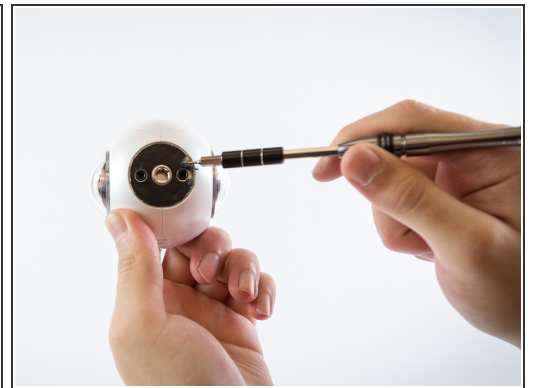


- Peel off the black rubber located on the bottom of the device using your hand or a small flathead screwdriver.

Step 5



- Once the black rubber has been removed, unscrew all Phillips #00 0.75 mm screws on the bottom of the device using a PH00 screwdriver head.

Step 6

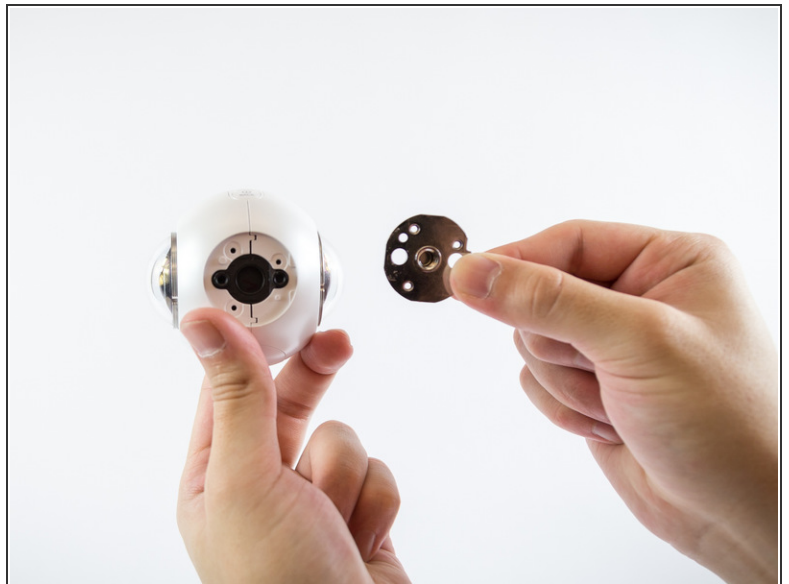

- Using a plastic opening tool, pry the tripod mount off the device.

Step 7



- Using both hands, carefully remove the right cover off the camera body.

Step 8



- To remove the left cover of the camera body, lift the left cover using a small flathead screwdriver and pull it off.

Step 9



- Once the camera body has been removed, lift and pull off the metal support ring using a small flathead screwdriver.
- Repeat for both sides of the camera.

Step 10




- Remove all Phillips #00 0.75 mm screws from the body of the camera using a PH00 screwdriver head.

Step 11




- Carefully lift the three sensors off using a plastic opening tool and pull them aside.

Step 12

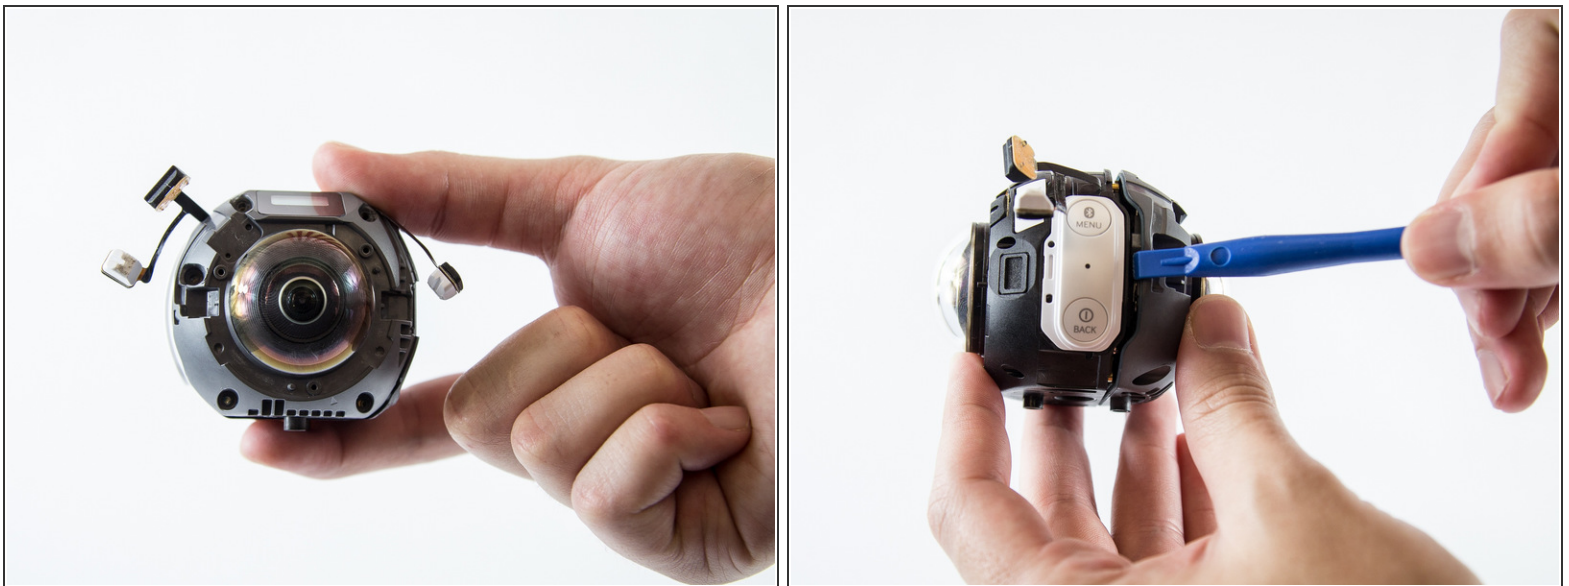

- Carefully use a plastic opening tool to separate the gray case from the black case on the device.

Step 13

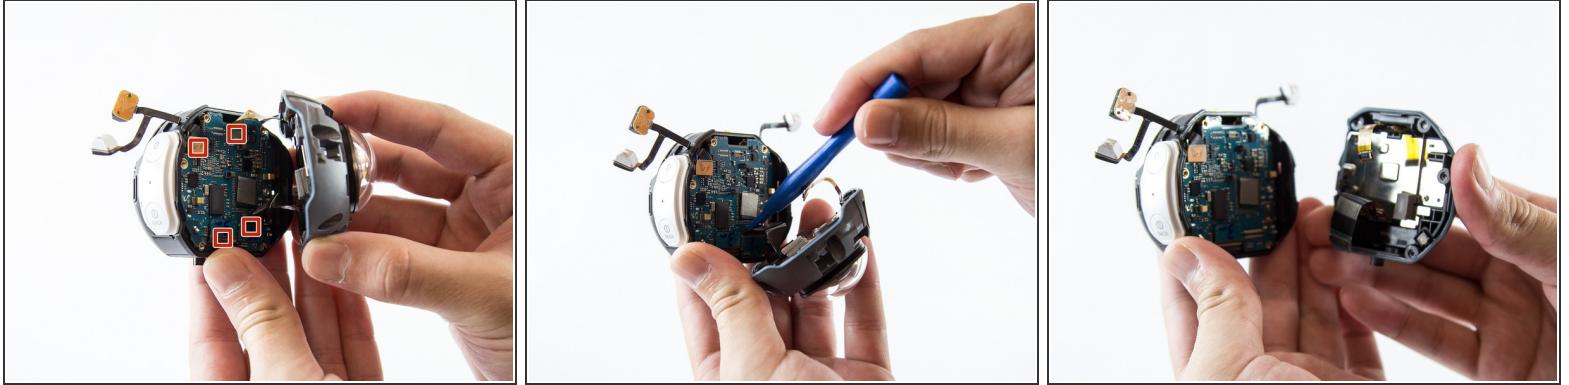

- Insert a plastic removal tool underneath the four sensors on the motherboard to fully separate the camera case.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-10-04 01:32:30 PM.